



HEADRAIL OPTION

1. Mount the brackets to the wall or window frame, with the outside brackets no further than 2" from the ends.

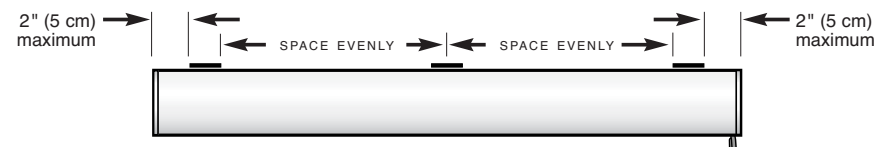


For wall or outside mounts

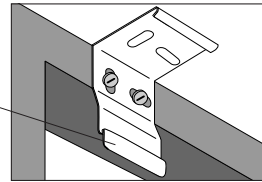


For wall or outside mounts, use the rear bracket holes. Make sure the release tab is always mounted on the bottom.

For inside or ceiling mounts

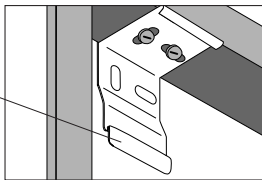

For inside or ceiling mounts, use the top bracket holes. Make sure the release tab is mounted on the bottom.

2. Mounting the Headrail. Position the Headrail with the front panel (A) resting on the top lip of all brackets. Push the bottom front of the Headrail firmly backwards and toward the window until the lip on the rear of the Headrail engages the bracket and snaps into place, (B) as shown.

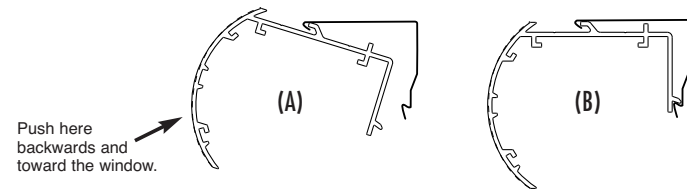

3. To remove a shade, from the bottom rear of the headrail, insert a flathead screwdriver in between the Headrail and bracket. Gently twist the screwdriver and pry open the bracket to release the Headrail. As you release the brackets, support the Headrail to keep it from falling.

CORD ANCHOR

The Cord Anchor reduces the hazards of strangulation and entanglement of young children or pets by limiting access to the control cord. In most cases, a second chain stop has been added to limit the drop length to ordered length.



1. Lower the blind
2. Hold the Cord Anchor upright, as shown in the diagram
3. Position the Cord Anchor on the window frame or the wall so that the cord and the Anchor do not interfere with the raising and lowering of the shade. The Cord Anchor should be installed without stretching or pulling down on the control cord. Stretching the cord will cause excessive wear.
4. Holding the Cord Anchor upright, and in position, as shown, insert and secure the screw through the hole. The mounting screw must be secured into a solid surface.

TO STRAIGHTEN SHADE

If your shade does not roll straight, correct as follows:

Figure A - Shade veers toward right, or left. Correct by lowering shade completely exposing the roller tube and wrapping a 1-1/2" long piece of masking tape, as shown in Figure B, on the side opposite of where it's veering. This increases the diameter of the roller slightly, acting as a straightener. Then raise and lower the shade.



FIGURE A



FIGURE B

If shade does not still roll straight, add a second layer of tape and repeat process. Continue to add tape until shade rolls straight.

CLEANING INSTRUCTIONS

Fabric:

Vacuum your roller shade frequently. This will keep your roller shade looking like new! If your roller shade becomes soiled use a high-quality foam upholstery cleaner.

Transparent and Vinyl: Transparent and vinyl shades can be readily cleaned with any standard commercial window spray cleaner, which should be diluted with 10 parts water to 1 part cleaning solution. For best results, shades should be removed from brackets, then placed on a clean, flat covered surface. To prevent streaking and inconsistent drying, wash and dry one small area at a time. Do not rub hard. Use a soft, lint-free cloth for washing and drying.

WARRANTY

CONGRATULATIONS ON YOUR SELECTION

Because we take pride in the workmanship and quality that go into every one of our products, we back our products with this

LIFETIME LIMITED WARRANTY COVERING OUR CUSTOM MADE SHADES

We extend this lifetime limited warranty to the original purchaser. This warranty applies only to manually operated Custom Products properly installed in the window, door or interior area for which they were intended. Installation of the product must be in accordance with accompanying instructions. The product cannot be modified. It is the purchaser's responsibility to maintain and clean the product in compliance with the instruction provided. The product must be used only in the window for which it was purchased. Damage to the product resulting from misuse, abuse, direct exposure to salty air or discoloration due to sunlight or the passage of time is not covered by this warranty.

This warranty does not apply to conditions caused by normal wear and tear upon the product. THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER OBLIGATIONS, LIABILITIES OR WARRANTIES. In no event shall the Manufacturer be liable for incidental or consequential damages or for any other direct or indirect damage, loss, cost, expense or fee. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you.

In the event of a defect under this warranty, we will repair or replace the product, at our option, provided it is returned to our store. Our warranty obligation excludes shipping charges and labor costs for measuring and installation. Repairs will be made with like or similar parts. This warranty gives you specific legal rights, and you may have other rights which vary from state to state. NOTES: Specialty Blinds and Shades are warranted for one year from the date of purchase. This warranty does not apply to Commercial Orders.

INSTALLATION INSTRUCTIONS




ROLLER SHADES With ROLLEASE® Beaded Chain Roller System and Spring Shade

To avoid errors and save valuable time, read these instructions completely before starting.


TYPE OF MOUNT

INSIDE MOUNT

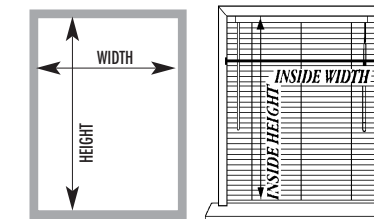

Inside or Recessed Mount

OUTSIDE MOUNT

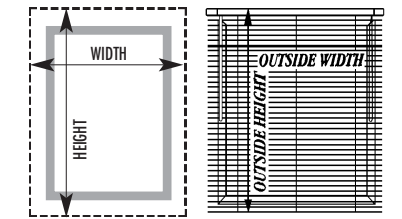

Outside or Wall Mount

TOOLS YOU WILL NEED

Pencil or Marker




Tape Measure or Yard Stick



Phillips Screwdriver (for optional installations only)



Flat-Head Screwdriver

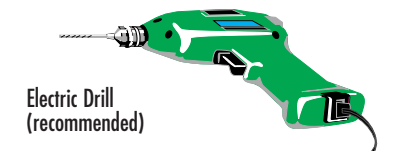


Electric Drill (recommended)



Level (recommended)

KNOW YOUR ROLLER SHADE SYSTEM

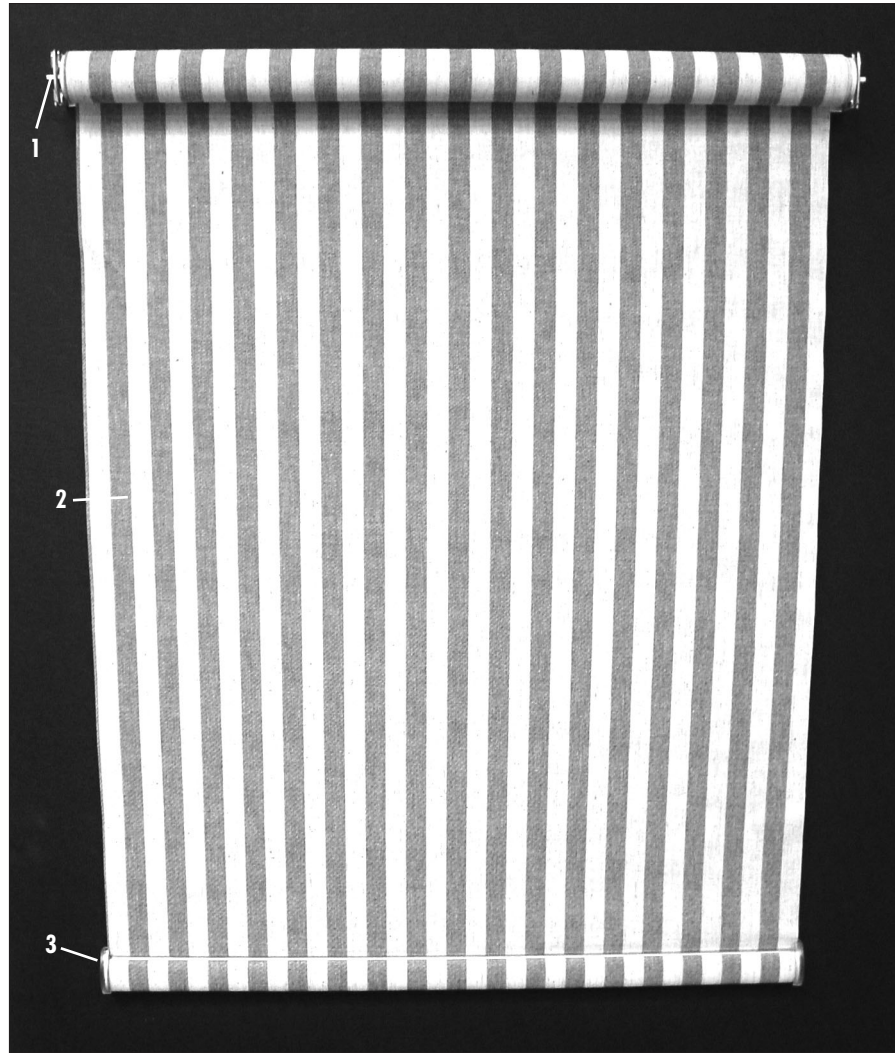

- (1) INSTALLATION BRACKET
- (2) FABRIC ROLLER SHADE
- (3) BOTTOM RAIL

INSTALLATION BRACKETS


The brackets provided are used for all types of installations, outside, ceiling and inside.

Note: Two screws are supplied for each bracket. These screws have Phillips/Hex heads, suitable for wood or sheet metal mounting surfaces. For PLASTER, DRYWALL, CONCRETE, STONE, BRICK OR TILE installations, we recommend using plugs or anchors.


MOUNTING THE BRACKETS: Make certain brackets are mounted straight and even or shade will roll crooked.

INSIDE MOUNT: With mounting brackets level and flush with window frame, screw through holes on either the back or inside of bracket into window frame.


OUTSIDE/CEILING MOUNT: Hold the shade up to the wall/ceiling in the position you want it to hang. Make sure the shade is centered and level. Mark the wall on each side at the end of the shade roll. Remove the shade and place mounting brackets level on pencil marks. Secure with screws.

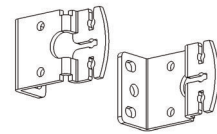


STANDARD BRACKET FOR 1-1/8" DIAMETER SPRING ROLLER

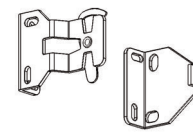


STANDARD BRACKET FOR 1-1/8" DIAMETER CLUTCH ROLLER

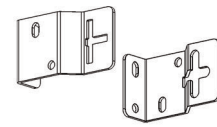


STANDARD BRACKET FOR 1-1/2" DIAMETER SPRING ROLLER

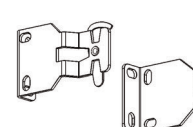


EXTENDED PROJECTION BRACKET FOR 1-1/8" DIAMETER CLUTCH ROLLER

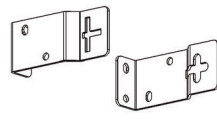

EXTENDED PROJECTION BRACKET FOR 1-1/2" DIAMETER SPRING ROLLER

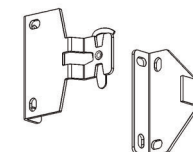

STANDARD BRACKET FOR 1-1/2" DIAMETER CLUTCH ROLLER

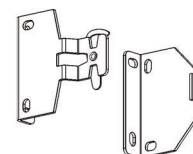

EXTENDED PROJECTION BRACKET FOR 1-1/2" DIAMETER CLUTCH ROLLER



Unwrap paper from ends of shade only to expose bracket engagement area. Once the shade has been installed in the brackets, remove remaining paper.


CHOOSE ROLL DIRECTION

SPRING ROLLER SHADE:

For Regular Roll, mount Round Pin Bracket on the right, Slotted Bracket on the left. **Reverse bracket positions for Reverse Roll only for 1-1/2" Roller.**

BEADED CHAIN CLUTCH CONTROL ROLLER SHADE:

For Regular Roll, mount Clutch Bracket on the right, End Plug Bracket on the left. **Reverse bracket positions for Reverse Roll.**

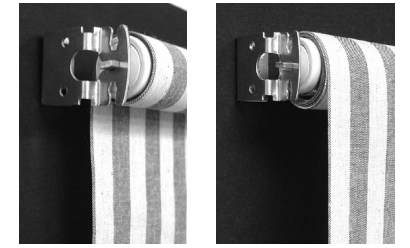

REGULAR ROLL

REVERSE ROLL

INSTALL SHADE

Outside/Wall Mount Example

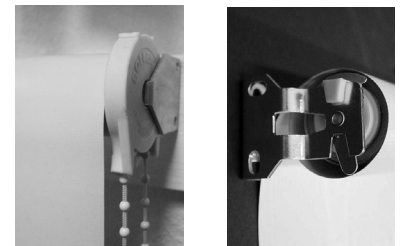


Figure A

Figure B

Beaded Chain Clutch Control Roller Shade:

Figure A: Push the clutch straight on to the blade of its bracket. The bottom of the clutch should always point straight down, as shown here.

Figure B: Lower the lug of the end plug into the V of the bracket and engage swivel lock. The roller should fit into the brackets securely, with just a little play.

Inside/Ceiling Mount Example

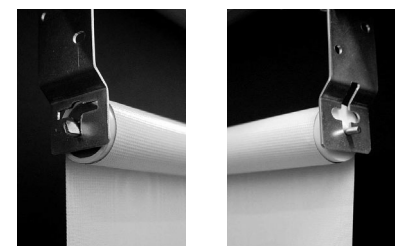


Figure A

Figure B

Spring Roller Shade:

Figure A: Always put the slotted end into the bracket first then...

Figure B: Insert the round pin end (or plastic speed reducer end).

OPERATION OF SHADE

FIGURE A - BEADED CHAIN ROLLER SHADE:

Pulling gently on the loop in one direction raises the shade; pulling the chain in the other direction lowers the shade.



FIGURE A

FIGURE B - SPRING ROLLER SHADE:

Always pull shade from the center. **To lower shade -** Gently pull the shade and slowly release but do not let go until shade locks into position.

To Raise Shade - Pull the shade down sharply a few inches then quickly raise the shade to desired position until shade locks.

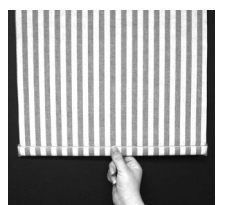


FIGURE B