


INSTALLATION INSTRUCTIONS

HONEYCOMB SHADES

CORDLESS LIFT SYSTEM


Thank you for your purchase. This shade has been custom built for you from the highest quality materials.

To avoid errors and save valuable time, please read these instructions before installing your new shade.

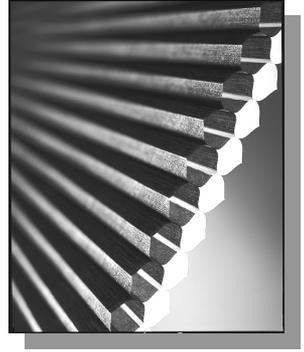

TOOLS YOU WILL NEED

1. Pencil or Marker
2. Measuring Tape
3. Needle-nose Pliers
4. Phillips Screwdriver
5. Carpenter's Level
6. Power Drill
7. Mounting Fasteners

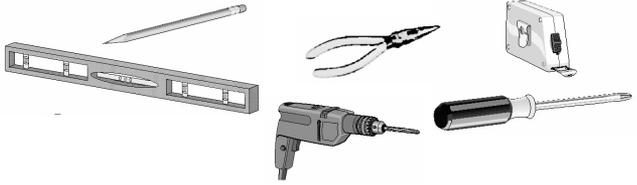


Mounting Surface	Fastener
Drywall, Plaster	Wall Anchors, Expansion Bolts (Not Provided)
Metal	Sheet Metal Screws (Not Provided)
Wood	No. 6 Hex Head Screws (Provided)

GETTING STARTED

All the required installation components are wrapped in your package along with these instructions. Check that the parts you have correspond to the parts shown below. *NOTE: Some parts may vary depending upon your chosen mounting options.*

PARTS

- Installation Brackets
- Extension Bracket (optional)
- Spacer Blocks shown here with installation bracket (optional)
- Hold Down Brackets (optional)
- Screws

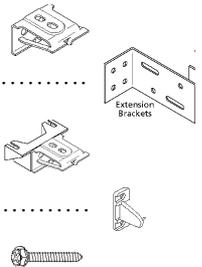


STEP 1: MOUNTING THE BRACKETS

The installation brackets may be used for **INSIDE** or **OUTSIDE** mounts. The $\frac{3}{4}$ " brackets also accommodate $\frac{1}{2}$ " double cell fabric shades.

Mounting the brackets level is essential for proper operation of the shade. Shim the brackets if necessary to achieve a level alignment.

The bracket requirements and placements are the same for inside and outside mounts. Refer to the following spacing diagram and bracket requirement chart.

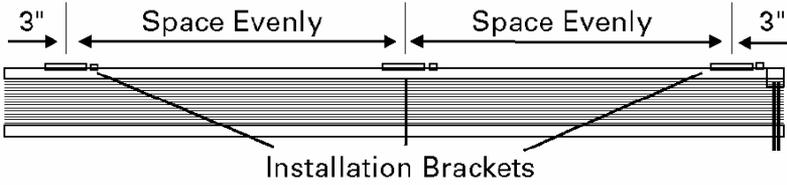

Installation Bracket Requirement Chart

Shade Width	Brackets Required
18" to 38"	2
38-1/8" to 72"	3
72-1/8" to 106"	4
106-1/8" to 120"	5

INSIDE MOUNTS:

For inside mounts the installation brackets will be screwed in place through the top two holes of each bracket. Refer to the depth chart below.


Inside Mount Depth Requirements

Bracket Type	Minimum Depth	Fully Recessed
3/8" Standard	1"	1-1/2"
3/4" Standard	1"	2-1/4"

NOTE: Prior to mounting the brackets, add any clearance depth required to avoid obstructions such as window cranks or handles.

ATTACH THE BRACKETS:

- Screw installation brackets through top two holes to desired window sill location.
- Ensure all brackets are level and aligned.

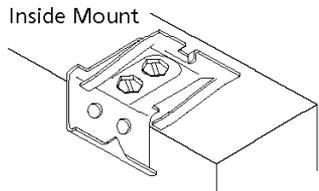

OUTSIDE MOUNTS:

For outside mounts the standard installation brackets will be screwed in place through the two back holes of each bracket. Refer to the minimum surface height chart below.


Outside Mount Surface Height Requirements

Bracket Size	Minimum Height
3/8" Bracket	1"
3/4" Bracket	1"

ATTACH THE BRACKETS:

- Screw standard brackets through two back holes to desired location.
- Ensure all brackets are level and aligned.


Outside Mount

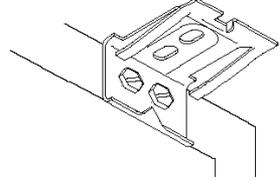


SPACER BLOCKS (optional):

- Spacer blocks will be attached to the end of each bracket.
- Ensure the screws are long enough to secure brackets to surface.
- If installing extension brackets, do not use spacer blocks.

Inside Mount
with Spacer


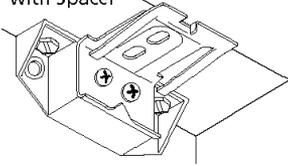


Outside Mount
with Spacer

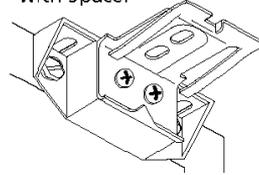


EXTENSION BRACKETS (optional):

- Position the extension brackets to the desired wall location.
- The bracket tops must be aligned and level to one another.
- Mount the extension brackets through diagonal back holes with two screws.
- ***If required*** - attach extension brackets together for additional clearance (optional).
- Attach installation brackets to extension brackets with included screws & nuts.

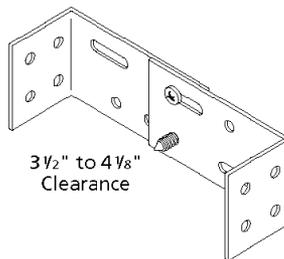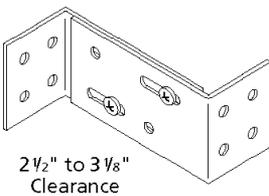

Bracket
Attachment

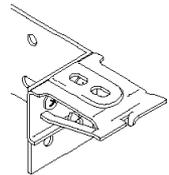


NOTE: Use the same holes for all brackets to ensure even projection from the surface.

STEP 2: INSTALLING THE SHADE

MOUNT THE HEADRAIL:

- With the front (colored) side of the shade facing you ...
- Tilt the headrail slightly backward to angle the front inside lip to the brackets.
- Rotate headrail upward to snap in it into place.

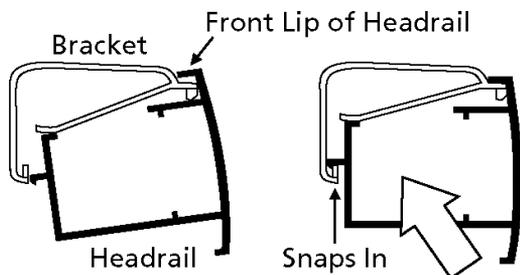

STEP 3: OPERATING THE SHADE


TO RAISE AND LOWER THE SHADE:

- Hold the center portion of the bottom rail to ensure level movement.
- Lower the shade by gently pulling downward to the desired position.
- Raise the shade by gently pushing upward to the desired position.

STEP 4: INSTALL REMAINING ITEMS

ATTACH THE HOLD DOWN BRACKETS (optional):

- Lower the shade and place the hold down pins into the bottom rail end caps.
- Mark the hold down bracket locations on the mounting surface.
- With the brackets level, attach them using two screws.



CLEANING INSTRUCTIONS

Honeycomb shades are made of an anti-static, dust resistant fabric which repels dirt and dust. For most of these fabrics, the following options are available if your shade needs cleaning.

DUSTING: Regular light dusting with a feather duster is all the cleaning that is needed in most circumstances.

VACUUMING: Use a hand-held vacuum with low suction for more thorough dust removal.

SPOT CLEANING: Use the following steps for spot cleaning: (1) Prepare a solution of warm water and mild dishwashing detergent. (2) Dampen a clean cloth in the solution and ring it out. (3) Dab the spot with the dampened cloth until it is gone. **DO NOT RUB THE FABRIC.** (4) Allow the shade to dry in the completely lowered position.

CAUTION: Avoid creasing Blackout fabrics during cleaning.

DEEP CLEANING: Use the following steps for deep cleaning: (1) Immerse shade in basin or bathtub filled with warm water and mild detergent. (2) Rinse with clean water. (3) Fully raise shade and tilt to eliminate excess water, (4) Reinstall damp shade, lower it, and let it dry completely.

CAUTION: Do not immerse Blackout fabrics. Do not immerse headrail in water.

ULTRASONIC CLEANING: Standard shades, except those made with Blackout Lining can be ultrasonically cleaned by a professional.

- Specify that a mild detergent be used.
- Never immerse the headrail in the solution.
- Dry the shade completely in the lowered position.

CAUTION: Do not ultrasonically clean Blackout fabrics. Do not immerse headrail in water.

WARRANTY INFORMATION

Lifetime Limited Warranty covering our Custom Made Blinds

We extend this lifetime limited warranty to the original purchaser. This warranty applies only to manually operated Custom Products properly installed in the window, door or interior area for which they were intended. Installation of the product must be in accordance with accompanying instructions. The product cannot be modified. It is the purchaser's responsibility to maintain and clean the product in compliance with the instruction provided. The product must be used only in the window for which it was purchased. Damage to the product resulting from misuse, abuse, direct exposure to salty air or discoloration due to sunlight or the passage of time is not covered by this warranty.

This warranty does not apply to conditions caused by normal wear and tear upon the product. This warranty is exclusive and in lieu of all other obligations, liabilities or warranties. In no event shall the Manufacturer be liable for incidental or consequential damages or for any other direct or indirect damage, loss, cost, expense or fee. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you.

In the event of a defect under this warranty, we will repair or replace the product, at our option, provided it is returned to our store. Our warranty obligation excludes shipping charges and labor costs for measuring and installation. Repairs will be made with like or similar parts. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Notes: Specialty Blinds and Shades are warranted for one year from the date of purchase. This warranty does not apply to Commercial Orders.